OLicense Activation

- Procedure
- 1 Install the product.

Enter the ' ${\bf Serial \ Number}$ ' during installation.

DeviceXPlorer OPC Server 5 - InstallShield W	lizard	×
Customer Information Please enter your information.		No.
User Name:		
Taro Takebishi		
Company Name:		
Takebishi Corporation		
<u>S</u> erial Number:		
123456789-12345678		
Install this application for:		
Anyone who uses to	his computer (all users)	
InstallShield		
	< <u>B</u> ack <u>N</u> ext>	Cancel

- ※ Enter ' Serial Number ' with hyphen (" ").
- 2 After installation is complete, start the OPC server and click "Help>License" on the menu bar.

Untitled - DeviceXPlorer OPC Serv	er			
File Edit View Project Tools	Help	_		
7871266	Manuals >	86 96 99 💫 🌏 🙇 🍘 🌾 3	OPC DDE	* 🔽
Project Explorer 🗸 🕈 🗙	Online Registration	4 0	Property	+ 4 ×
	Send mail to Support			~
Project 'Untitled'	Connect to Product's Web Site		81 2↓ 🖉	13 A A
B-U SYSTEM	License			
SISTEM [MemoryMap]	About DeviceXPlorer			
Project Explorer 🍫 Structure Tem				
Message				▼ ‡ ×
🚥 🖗 😫 🐋 🗉 🚜 🍸				
I No Date Time	Type Message			
				<u> </u>
😪 Message 🮯 Watch(1) 🛛 🤣 Monit	or(1)			

③ License list is displayed as follows.

Double-click the target model for license activation.

In this case, an example of selecting $\ensuremath{\mathsf{ENTERPRISE}}$.

Outitled - DeviceXPlorer OPC Server		-		×
<u>File Edit View Project Tools Help</u>				
📝 📂 💾 X. Th Th 🍿 🚬 👽 ⋟ 🖓 😭 🇞 🎭 🍣 🎒 🔺 🏟 🏈	() ()	OPC DDE	×	
Project Explorer V X License X	▶ Prop	erty		
Component Version Status Serial Number Com	^			~
ENTERPRISE TERM		2 🗸 🛃	13 61	P
SYSTEM Mitsubishi MELS 5.4.0.1 TERM				
SYSTEM [MemoryMap] Omron SYSMAC 5.4.0.1 TERM				
Jtekt IOYOPUG 54.0.1 TERM				
History HUDC 5401 Before license activation the				
Sharp SATELLITE 540.1				
Fuji MICREX 5.4.0.1 status is displayed as "TERM	".			
Panasonic FP 5.4.0.1	_			
Yaskawa MP 5.4.0.1 TERM				
Keyence KV 5.4.0.1 TERM				
Toshiba PLC 5.4.0.1 TERM				
Rockwell AB 54.0.1 TERM				
Siemens SIMAILG 54.0.1 TERM				
Eartho CNC 54.0.1 TERM				
Pande Orico 540.1	~			
Project Explorer Structure Tem				
Message				• 4 ×
😡 🙊 😩 💒 🕫 🖉 🍸				
I No Date Time Type Message				^
⊗ 00002 2019/05/17 12:09:58.112 SYSTEM Mode changes to stop mode.				~
Message 💣 Watch(1) 🥨 Monitor(1)				•
Ready	Admin	istrator	O Mon	itorSt .

④ The license activation dialog is displayed as shown below, so please check the computer ID. Then click on the "Activate" button.

License Activation	
Component	ENTERPRISE
Version	
<u>S</u> erial No.	123456789-12345678
Computer ID	1234-1234-1234-1234
License Code	
Clea <u>r</u> Chan	ge <u>A</u> ctivate <u>C</u> lose

- % Make a note the computer ID with hyphen ("-").
- 5 The message is displayed as follows.



6 Perform user registration in the following URL to get obtain a license code
 FAWEB : <u>https://www.faweb.net/en/user-form/</u>

Enter or select the following items.

- Product Serial Number
 (Product Serial Number)
- Computer ID (Acquired computer ID)
- $\cdot \ License \ Agreement$
- Your Information

within 1-2 business days a license code will be sent by e-mail .

🍀 FAWEB 🥆	ТАКЕВІ(НІ 🌐	Company Information	User Registration 🔤 Cont	tact JA EN Q.▼	
Products	Solutions	Download	Support	FAQ	
	Online	User Regis	stration		
Antipatrial parameters and a second s					

TOP Online User Registration

Product Information

Product Name Req	DeviceXPlorer OPC Server
Product Serial Number Req	vired If you register more than 2 serial numbers, please key in the first serial number to this column and the remains to the remarks column.
Computer ID	Please inform us your Computer ID when the product require license code. We will issue license code by return. Computer ID is a takebishi product's unique number generated based on the machine information after entering the serial number. 1234-1234-1234-1234
	✓ I agree to the license agreement. If you agree to license agreement below, please check the box.

 \bigcirc After getting the license code, right-click on the OPC server and click "**Run as administrator**".

DeviceXPI	Open file location	
OPC Serv	Run as administrator	
	Troubleshoot compatibility Pin to Start	

 \circledast Open the license activation dialog as same steps \circledast to \circledast

Enter the license code described in the user registration completion e-mail, and click the "Activate" button.

License Activation				
Component	ENTERPRISE			
Version				
Serial No.	123456789-12345678			
Computer ID	1234-1234-1234-1234			
License Code	AAAA-BBBB-CCCC-DDDD			
License Code is needed. Please send us Serial No and Computer ID.				
Clear Change	Activate Close			

If the license code is activated successfully, you can see the following message.



- * 'License Transfer' cannot be performed when the OPC Server is running without "Run as administraror".
- X Run the OPC Server in the usual way, except when doing 'License Transfer'.
- (9) Check the "Status" on the license list screen. If "Status" is "**OK(SOFTWARE)**", the software key authentication procedure is complete.

Untitled - DeviceXPlorer OPC	Server									×
<u>File Edit View Project To</u>	ools <u>H</u> elp									
🛛 🎢 🗖 🕹 🖻	T 👔 🔎 👽	🗲 ⋞	80 80 9	iy 🕫 🏈	🚣 🔅	*	👸 орс	DDE	*	
	License 🗙						Property			
	Component	Version	Status	Serial Number		Coi ^				~
Project 'Untitled'	ENTERPRISE		OK(SOFTW	123456789-12	2345678	123	₿ A	2	361	P
SYSTEM	Mitsubishi MELS	5.4.0.1	OK(SOFTW							
SYSTEM [MemoryMap]] Omron SYSMAC	5.4.0.1	OK(SOFTW							
	Yokogawa FA-M3		OKISOF TW.		e concerna e ane					
	Hitachi HIDIC	After	activatio	on,the stat	tus is					
	Sharp SATELLITE	displa	ved as "	OK(SOFT	WARF)	,				
	Fuji MICREX	aispic		01(0011	•••	<u> </u>				
	Yaskawa MP	5401	OK(SOFTW							
	Keyence KV	5.4.0.1	OK(SOFTW							
	Toshiba PLC	5.4.0.1	OK(SOFTW							
	Rockwell AB	5.4.0.1	OK(SOFTW							
	Siemens SIMATIC	5.4.0.1	OK(SOFTW							
	Lsis XGT	5.4.0.1	OK(SOFTW							
	Fanuc GNC	5.4.0.1	OK(SOFTW			~				
📑 Project Explorer 🧇 Structure Te	em <					>				
Message										• 4 ×
💼 🖗 획 🔬 🗉 🖉 🍸										
I No Date Ti	ime Type	Message								^
1 00010 2019/05/17 13	3:13:53.623 SYSTEM	Serial num	ber and license	code are valid.(EN	ITERPRISE)					~
😪 Message 🮯 Watch(1) 🛛 🥨 M	Ionitor(1)									
Ready							Administrat	or (O Mon	itorSt