OTransfer of license

It is possible to transfer of DeviceXPlorer OPC Server's license from a source PC to a destination PC. For example, after evaluating the OPC Server on development PC, transfer its license from development PC to production PC.

- $\boldsymbol{\cdot} \text{ Procedure}$
- ① Run the OPC server on the source PC to see 'Serial Number' of the source PC.
- ② Click "Help > License" on the menu bar.

Untitled - DeviceXPlorer OPC Serv	er			-	o x	
File Edit View Project Tools	Help	_				
787 12 6 6	Manuals	' 🗞 🎭 🔍 🌏 🙇 🄇	ð 🗭 🚳	OPC DDE	🛠 🔽	
Project Explorer 🗸 🗸 🗸	Online Registration		d ⊉ Pro		★ # ×	
	Send mail to Support				~	
Project 'Untitled'	Connect to Product s web site			Ź↓ 🛃	302	
SYSTEM	License	4				
STOTEM (MemoryMap)	About DeviceXPlorer					
Project Explorer 🍫 Structure Tem						
Message					→ # ×	
👳 🖗 😫 🝰 🕾 🖉 🝸						
I No Date Time	Type Message	ſ				
😤 Message 🧭 Watch(1) 🤣 Monit	or(1)		500	IVUE		

③ License list is displayed as follows.

File Edit Yew Project Tools Help Project Pr	Intitled - DeviceXPlorer OPC Se	rver					_		×
File Edit View Project Jools Heip Project Project </td <td>,</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>~</td>	,								~
Image: Construction of the state of the	<u>F</u> ile <u>E</u> dit <u>V</u> iew <u>P</u> roject <u>T</u> ool	s <u>H</u> elp							
project Explorer Idense x Component Version Status Serial Number Control Project Untitled SYSTEM Mitsubishi MELS Status Serial Number Control System System System System Status Status	i 📝 📂 💾 🐰 🗈 🛛	🖥 🕅 📃 🍢	> 9	300	» 🔍 🌏 🗻	🔅 🗭 🤅	OPC DD	E 🛠	
Component Version Status Serial Number Cori Project 'Untitled ENTERPRISE OK(SOFTW. 123456789-12345678 567 Mitsubishi MELS. 54.0.1 OK(SOFTW. 123456789-12345678 567 Omron SYSTEM Omron SYSMA 54.0.1 OK(SOFTW. 640.1 640.0 Jekt TOYOPUC 54.0.1 OK(SOFTW. 640.1 640.0 Jekt TOYOPUC 54.0.1 OK(SOFTW. 640.1 640.0 Jekt TOYOPUC 54.0.1 OK(SOFTW. 640.0 640.0 Project Laylore SYSTEM Mitsubishi MELS. 540.1 OK(SOFTW. 640.0 Panasonic FP 54.0.1 OK(SOFTW. 640.1 640.0 640.0 640.0 Revence KV 54.0.1 OK(SOFTW. 640.1 640.0 640.0 640.0 640.0 Siemens SIMATIC 54.0.1 OK(SOFTW. 640.0 640.0 640.0 640.0 640.0 640.0 640.0 640.0 640.0 640.0 640.0 640.0 640.0 640.0 640.0 640.0 640.0 640.0 640.0	Project Explorer 🔷 🔻 🗭	× License 🗙				4 ⊳	Property		
Project 'Untitled ENTERPRISE OK(SOFTW. 123456789-12345678 567 SYSTEM Ormon SYSMAC 54.0.1 OK(SOFTW. 567 Jekt TOYOPUC 54.0.1 OK(SOFTW. 567 Jekt TOYOPUC 54.0.1 OK(SOFTW. 567 Jitki TOYOPUC 54.0.1 OK(SOFTW. 567 Sharp SATELITE 54.0.1 OK(SOFTW. 540.1 OK(SOFTW. Sharp SATELITE 54.0.1 OK(SOFTW. 540.1 OK(SOFTW. Panasonic FP 54.0.1 OK(SOFTW. 540.1 Yaskawa MP 54.0.1 OK(SOFTW. 540.1 Siemens SIMATIC 54.0.1 OK(SOFTW. 540.1 <td>III III III</td> <td>Component</td> <td>Version</td> <td>Status</td> <td>Serial Number</td> <td>Coi ^</td> <td></td> <td></td> <td>~</td>	III III III	Component	Version	Status	Serial Number	Coi ^			~
Image: Statue Image: Statue <td< td=""><td>Project 'Untitled'</td><td>ENTERPRISE</td><td></td><td>OK(SOFTW</td><td>123456789-1234567</td><td>78 567</td><td>8∎ 2↓ 🛃</td><td>136</td><td>1,00</td></td<>	Project 'Untitled'	ENTERPRISE		OK(SOFTW	123456789-1234567	78 567	8∎ 2↓ 🛃	136	1,00
Omron SYSMAC 54.0.1 OK(SOFTW		Mitsubishi MELS	5.4.0.1	OK(SOFTW					
Jtekt TOYOPUC 54.0.1 OK(SOFTW	SYSTEM [MemoryMan]	Omron SYSMAC	5.4.0.1	OK(SOFTW					
Yokogawa FA-M3 5.4.0.1 OK(SOFTW Hitachi HIDIC 5.4.0.1 OK(SOFTW Sharp SATELLITE 5.4.0.1 OK(SOFTW Fuji MICREX 5.4.0.1 OK(SOFTW Panasonic FP 5.4.0.1 OK(SOFTW Panasonic FP 5.4.0.1 OK(SOFTW Panasonic FP 5.4.0.1 OK(SOFTW Yaskawa MP 5.4.0.1 OK(SOFTW Reckwell AB 5.4.0.1 OK(SOFTW Rockwell AB 5.4.0.1 OK(SOFTW Bockwell AB 5.4.0.1 OK(SOFTW Isiemens SIMATIC 5.4.0.1 OK(SOFTW Broject Explorer Structure Term Fanue CNO Message Structure Term Verset Message Yatom Message Message Watch(1) Monitor(1) Ready SOURCCE PCC	CTOTEM [MemoryMap]	Jtekt TOYOPUC	5.4.0.1	OK(SOFTW					
Hitachi HIDIC 54.0.1 OK(SOFTW Sharp SATELLITE 54.0.1 OK(SOFTW Panasonic FP 54.0.1 OK(SOFTW Panasonic FP 54.0.1 OK(SOFTW Yaskawa MP 54.0.1 OK(SOFTW Rockwell AB 54.0.1 OK(SOFTW Siemens SIMATIC 54.0.1 OK(SOFTW Lisis XGT 54.0.1 OK(SOFTW Lisis XGT 54.0.1 OK(SOFTW Yaskawa Yaskawa Yaskawa Message Yaskawa Yaskawa Yaskawa Yaskawa Yaskawa		Yokogawa FA-M3	5.4.0.1	OK(SOFTW					
Sharp SATELLITE 5.4.0.1 OK(SOFTW Fuji MICREX 5.4.0.1 OK(SOFTW Panasonic FP 5.4.0.1 OK(SOFTW Yaskawa MP 5.4.0.1 OK(SOFTW Yaskawa MP 5.4.0.1 OK(SOFTW Yaskawa MP 5.4.0.1 OK(SOFTW Yaskawa MP 5.4.0.1 OK(SOFTW Keyence KV 5.4.0.1 OK(SOFTW Rockwell AB 5.4.0.1 OK(SOFTW Siemens SIMATIC 5.4.0.1 OK(SOFTW Eace Isis KGT 5.4.0.1 OK(SOFTW Eace Fanue CNC 5.4.0.1 OK(SOFTW Eace Versage Y Y Y Y L No Date Time Type Message Y L No Date Time Type Message Y X Message Watch(1) Wonitor(1) <td></td> <td>Hitachi HIDIC</td> <td>5.4.0.1</td> <td>OK(SOFTW</td> <td></td> <td></td> <td></td> <td></td> <td></td>		Hitachi HIDIC	5.4.0.1	OK(SOFTW					
Fuji MICREX 5.4.0.1 OK(SOFTW Panasonic FP 5.4.0.1 OK(SOFTW Yaskawa MP 5.4.0.1 OK(SOFTW Yaskawa MP 5.4.0.1 OK(SOFTW Yaskawa MP 5.4.0.1 OK(SOFTW Toshiba PLC 5.4.0.1 OK(SOFTW Rockwell AB 5.4.0.1 OK(SOFTW Siemens SIMATIC 5.4.0.1 OK(SOFTW Fanuc CNC 5.4.0.1 OK(SOFTW Ymaschi Dubat Ymaschi Dubat Ymaschi Dubat		Sharp SATELLITE	5.4.0.1	OK(SOFTW					
Panasonic FP 54.0.1 OK(SOFTW Yaskawa MP 54.0.1 OK(SOFTW Yaskawa MP 54.0.1 OK(SOFTW Keyence KV 54.0.1 OK(SOFTW Toshiba PLC 54.0.1 OK(SOFTW Rockwell AB 54.0.1 OK(SOFTW Siemens SIMATIC 54.0.1 OK(SOFTW Siemens SIMATIC 54.0.1 OK(SOFTW Lisis XGT 54.0.1 OK(SOFTW Fanuc CNC 54.0.1 OK(SOFTW Fanuc CNC 54.0.1 OK(SOFTW Yex Yex Yex Message Yex Message Yex Yex Yex Message Yex Yex Yex Yex Yex Yex Yex		Fuji MICREX	5.4.0.1	OK(SOFTW					
Yaskawa MP 5.4.0.1 OK(SOFTW Keyence KV 5.4.0.1 OK(SOFTW Toshiba PLC 5.4.0.1 OK(SOFTW Rockwell AB 5.4.0.1 OK(SOFTW Siemens SIMATIC 5.4.0.1 OK(SOFTW Isis XGT 5.4.0.1 OK(SOFTW Fanue CNC 5.4.0.1 OK(SOFTW Fanue CNC 5.4.0.1 OK(SOFTW Fanue CNC 5.4.0.1 OK(SOFTW Y Structure Tem V Message Y Message Y Message Y Message Y Message Y Message Y Ready Stock(1)		Panasonic FP	5.4.0.1	OK(SOFTW					
Keyence KV 54.0.1 OK(SOFTW Toshiba PLC 54.0.1 OK(SOFTW Rockwell AB 54.0.1 OK(SOFTW Siemens SIMATIC 54.0.1 OK(SOFTW Lisis XGT 54.0.1 OK(SOFTW Fanue CNC 54.0.1 OK(SOFTW Fanue CNC 54.0.1 OK(SOFTW Message * * * * *		Yaskawa MP	5.4.0.1	OK(SOFTW					
Toshiba PLC 5.4.0.1 OK(SOFTW Rockwell AB 5.4.0.1 OK(SOFTW Siemens SIMATIC 5.4.0.1 OK(SOFTW Lsis XGT 5.4.0.1 OK(SOFTW Fanue CNC 5.4.0.1 OK(SOFTW Versage Versage Versage Message Time Type Message Watch(1) Monitor(1) Ready SOURCEE PC		Keyence KV	5.4.0.1	OK(SOFTW					
Rockwell AB 5.4.0.1 OK(SOFTW Siemens SIMATIC 5.4.0.1 OK(SOFTW Lsis XGT 5.4.0.1 OK(SOFTW Fanuc CNC 5.4.0.1 OK(SOFTW Fanuc CNC 5.4.0.1 OK(SOFTW Message * Message * Message * Source for the second seco		Toshiba PLC	5.4.0.1	OK(SOFTW					
Siemens SIMATIC 5.4.0.1 OK(SOFTW Lsis XGT 5.4.0.1 OK(SOFTW Fanuc CNC 5.4.0.1 OK(SOFTW Fanuc CNC 5.4.0.1 OK(SOFTW Message * * Message * * Source Factor * * Message * *		Rockwell AB	5.4.0.1	OK(SOFTW					
Lisis XGT 5.4.0.1 OK(SOFTW Fanue CNC 5.4.0.1 OK(SOFTW Fanue CNC 5.4.0.1 OK(SOFTW Control of the state of the stat		Siemens SIMATIC	5.4.0.1	OK(SOFTW					
Fanue CNC 5.4.0.1 Project Explorer Structure Tem Message Image: Structure Tem Image: Structure Tem Image: Structure Tem Image: Structure Tem Message Image: Structure Tem Image: Structure Tem <t< td=""><td></td><td>Lsis XGT</td><td>5.4.0.1</td><td>OK(SOFTW</td><td></td><td></td><td></td><td></td><td></td></t<>		Lsis XGT	5.4.0.1	OK(SOFTW					
Project Explorer Message Message Image: Structure Tem Im		Fanuc CNC	5.4.0.1	OK(SOFTW					
Message Studie rem Message Messag	Design the European Characteria Tam	V	E # 0 1	OV/COFTU		`			
Message Vatch(1) Monitor(1) Ready	Project explorer Structure lem	··· [`				-			
Image: Second state Image: Second state Image: Second state Time Time Type Message Image: Second state Image: Second state Source pc Ready Source pc	Message								
L No Date Time Type Message	👳 🥐 😫 📬 🕾 🖉 🍸								
Ready	I No Date Time	е Туре	Message						^
Message Watch(1) Monitor(1) Ready					[
Ready DOUCLI U	😤 Message 🧭 Watch(1) 🛛 🎊 Mor	nitor(1)				SOT	TRC	R T	C
	Ready					DUC			U

Check 'Serial Number' of the target for license transfer.

*** Make a note about the source PC's ' Serial Number 'with hyphen (" - ").**

④ Install the OPC server on the destination PC.

Enter ' Serial Number ' (same ' Serial Number ' at source PC).

DeviceXPlorer OPC Server 5 - InstallShie Customer Information	DESTINATION PC
Please enter your information.	
User Name:	
Taro Takebishi	
Company Name:	
Takebishi Corporation	
<u>S</u> erial Number:	7
123456789-12345678	
Install this application for:	
Anyone who us	es this computer (all users)
InstallShield	
	< <u>B</u> ack <u>N</u> ext > Cancel

- X Enter ' Serial Number ' with hyphen (" ").
- (5) After installation for the **destination PC**, start the OPC server and click "Help> **License** " on the menu bar.

Ontitled - DeviceXPlorer OPC Ser	ver	– 🗆 X
File Edit View Project Tools Project Explorer • 0 × 0 Project Explorer • 0 × 0 Project 'Untitled' SYSTEM SYSTEM [MemoryMap]	Help Manuals Online Registration Send mail to Support Connect to Product's Web Site License About DeviceXPlorer	Image: Solution of the second state
Message Image: Structure Tem Message Image: Structure Tem Message Image: Structure Tem Message Image: Structure Tem Message Image: Structure Tem Message Image: Structure Tem Message Image: Structure Tem Message Image: Structure Tem Image: Structure Tem	Type Message	DESTINATION PC

6 6 License list is displayed as follows. Double-click the target model for license activation.

In this case, an example of selecting ENTERPRISE.

Untitled - DeviceXPlorer OPC Serve	r							_		×
<u>File Edit View Project Tools</u>	<u>H</u> elp									
I 🖉 📂 💾 I 🐰 🖻 🖷	1	۶ 🖓	6 6	≫ ∾ €) 🚣 🤅	\$	Ö OPC	DDE	*	
Project Explorer 🛛 👻 🕈 🗙	License 🗙						Property			
	Component	Version	Status	Serial Numbe	r	Coi ^				\sim
Project 'Untitled'	ENTERPRISE		TERM				₿∎ 2 +	2	36	<i>P</i>
SYSTEM	Mitsubishi MELS	5.4.0.1	TERM							
SYSTEM [MemoryMap]	Omron SYSMAC	5.4.0.1	TERM							
,	Jtekt TOYOPUC	5.4.0.1	TERM							
	Yokogawa FA-M3	5.4.0.1	TERM							
	Hitachi HIDIC	5.4.0.1	TERM							
	Sharp SATELLITE	5.4.0.1	TERM							
	Fuji MICREX	5.4.0.1	TERM							
	Panasonic FP	5.4.0.1	TERM							
	Yaskawa MP	5.4.0.1	TERM							
	Keyence KV	5.4.0.1	TERM							
	Toshiba PLC	5.4.0.1	TERM							
	Rockwell AB	5.4.0.1	TERM							
	Siemens SIMATIC	5.4.0.1	TERM							
	LSIS XGT	5.4.0.1	TERM							
	Fanuc CNC	5.4.0.1	TERM			~				
Project Explorer 🧇 Structure Tem	<					>				
Message 🗸 🗘 🗸										
💷 🖗 😩 💒 🕾 💦 🍸										
I No Date Time	Туре	Message								^
👷 Message 🥰 Watch(1) 🥨 Monitor(1)					EST	INA	TIC)N	P	\mathbf{C}
Ready										-

⑦ License Activation dialog is displayed as follows, so see the computer ID of the destination PC.

License Activation	DESTINATION PC
Component	ENTERPRISE
Version	
<u>S</u> erial No.	123456789-12345678
Computer <u>I</u> D	1234-1234-1234-1234
<u>L</u> icense Code	
Clea <u>r</u> Chan <u>g</u> e	<u>A</u> ctivate <u>C</u> lose

X Make a note about the destination PC 's ' Serial Number ' with hyphen (" - ").

8 On source PC, Right-click a shortcut of the OPC server and click "Run as administrator".

0			
2	Open		
DeviceXPI OPC Serv	Open file location		
	💎 Run as administrator		
	Troubleshoot compatibility		
	Pin to Start		
		SOURCI	E PC

- * 'License Transfer' cannot be performed when the OPC Server is running without "Run as administraror".
- % Run the OPC Server in the usual way, except when doing 'License Transfer'.

9 In the list of licenses, right-click the target for license transfer, and click "License Transfer".

2 Untitled - DeviceXPlorer OPC Serve	r					-			×
File Edit View Project Tools	Help								
🛛 📂 💾 X 🖻 🖷	11 🔎 💆	۶ 🌪	8 8 8	> => 🌏 🗻 🏟) 🕷	OPC I	DDE 🦿	* 🗆	~
Project Explorer 🛛 👻 🕈 🗙	License 🗙				4 ⊳	Property			
🔢 🖬 🖬	Component	Version	Status	Serial Number	Coi ^		1 1 1177	1	~
III Project 'Untitled' ⊨III SYSTEM	ENTERPRISE Mitsubishi MELS	5.4.0.1	OK(SOFTW OK(SOFTW	License Activate	567	i 2↓ s	2 44	6 A P	
SYSTEM [MemoryMap]	Omron SYSMAC Jtekt TOYOPUC	5.4.0.1 5.4.0.1	OK(SOFTW OK(SOFTW	License Transfer	_				
	Yokogawa FA-M3 Hitachi HIDIC	5.4.0.1 5.4.0.1	OK(SOFTW OK(SOFTW	Library Version	I				
	Sharp SATELLITE Fuji MICREX	5.4.0.1 5.4.0.1	OK(SOFTW OK(SOFTW						
	Panasonic FP	5.4.0.1	OK(SOFTW						
	Yaskawa MP	5.4.0.1	OK(SOFTW						
	Techiba PLC	5.4.0.1	OK(SOFTW						
	Rockwell AR	5.4.0.1	OK(SOFTW						
	Siemens SIMATIC	5401	OK(SOFTW						
	Lsis XGT	5401	OK(SOFTW						
	Fanuc CNC	5.4.0.1	OK(SOFTW						
	V	E 4 0 1	OV/COFTW		~				
Project Explorer Structure Tem	<				>				
Message								-	ф ×
🚥 🖗 획 💒 🗉 🖉 🍸									
I No Date Time	Туре	Message							
😤 Message 🦪 Watch(1) 🛛 🥨 Monito	r(1)				SUL	JKC	E	P(5
Transfer license to other PC									

1 License Activation dialog is displayed as follows.

Enter the computer ID of the destination PC that you noted in step \bigcirc and click the "Transport" button.

License Activation		SOURCE PC
Component	ENTERPRISE	
Version		
<u>S</u> erial No.	123456789-12	345678
Computer <u>I</u> D	1234-1234-123	34-1234
License Code Specify Computer ID for ar License Code for another F	nother PC. PC will be publis	Computer ID of the destination PC.
	Transp	oort <u>C</u> lose

① New "License Code " is displayed.

License Activation	SOURCE PC
Component	ENTERPRISE
Version	
<u>S</u> erial No.	123456789-12345678
Computer <u>I</u> D	1234-1234-1234-
License Code	AAAA-BBBB-CCCC-DDDD
Specify Computer ID for a License Code for another	another PC. PC will be published.
	<u>I</u> ransport <u>U</u> lose

X Make a note of new "License Code " with hyphen (" - ").

⁽¹⁾ On the destination PC, Right-click a shortcut of the OPC server and click "Run as administrator".

0				
Device VD		Open		
OPC Serv		Open file location		
	•	Run as administrator		
		Troubleshoot compatibility		
		Pin to Start		
			DESTINATION	I PC

③ Click "Help> License " on the menu bar. Double-click the target model for license activation on the license list screen.

License Activation dialog is displayed. Enter the new "License Code " issued in step 11, and click

" Activation ".

License Activation		DESTINATION PC
Component	ENTE	RPRISE
Version		
Serial No.	123456	5789-12345678
Computer ID	1234-1	234-1234-1234
License Code	AAAA-E	BBBB-CCCC-DDDD
License Code is nee Please send us Seri	ded. al Noand Comp	uter ID.
Clear	Change	Activate Close

(1) Check the "Status" on the license list. If "Status" is "**OK(SOFTWARE)**", the software key authentication procedure is complete.

